

Taper-Lock™ Mount

How to Use


To mount a head* in the Taper-Lock™ Mount:

1. Press down and hold the latching Lever at the top of the mount.
2. Align and engage a head with the top dowel Pin on the mount.
3. Apply downward pressure to the head while releasing the Lever.

To release a head* from the Taper-Lock™ Mount:

1. Grasp the head.
2. Press down and hold the latching Lever at the top of the mount.
3. Disengage the head from the mount and release the Lever.

** Head is a generic term for pump, valve, tool, syringe mount, etc.*

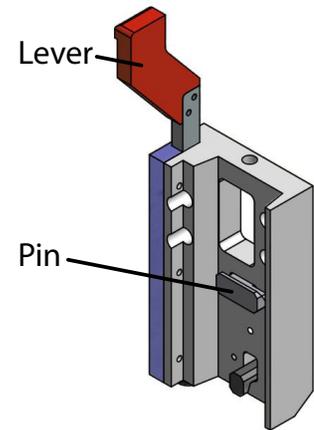

GPD Global®

611 Hollingsworth Street, Grand Junction, CO 81505
tel +1.970.245.0408 • fax +1.970.245.9674
(1.800.742-5473) • www.gpd-global.com

GPD Global®
Precision Dispensing Systems

PN22200611
07/16/15